
Advanced→ USB Configuration

| | |
|-----------------|--|
| Front USB Ports | Allows you to enable or disable the USB ports at the front of your computer. |
| Rear USB Ports | Allows you to enable or disable the USB ports at the back of your computer. |
| Top USB Ports | Allows you to enable or disable the USB ports at the top of your computer. |

Advanced→ Onboard Device Configuration

| | |
|--------------------------|--|
| Onboard Audio Controller | Allows you to enable or disable the onboard audio controller. |
| SATA Mode | Allows you to configure the integrated hard drive controller to ATA or RAID. |
| Intel Multi-Display | Allows you to enable or disable multiple displays.. |
| Onboard LAN Controller | Allows you to enable or disable the onboard LAN controller. |
| Onboard LAN Boot ROM | Allows you to enable or disable the ROM of the onboard LAN controller. |

Boot

| | |
|-------------------|--|
| Numlock Key | Select power-on state for numlock. |
| Secure Boot | Allows you to enable or disable the secure boot mode. |
| Load Legacy OPROM | Allows you to load the legacy OPROM when in the UEFI boot mode. |
| Keyboard Errors | Displays keyboard-related errors during boot. |
| USB Boot Support | Allows you to enable or disable booting from USB mass-storage devices. |
| Boot Mode | Allows you to select the type of boot. |
| 1st Boot | Displays the first boot device. |
| 2nd Boot | Displays the second boot device. |
| 3rd Boot | Displays the third boot device. |
| 4th Boot | Displays the fourth boot device. |
| 5th Boot | Displays the fifth boot device. |
| Hard Disk Drives | Allow you to choose the bootable hard-disk drive. |